

ERSATZTEILLISTE OKIPAGE 8c Plus

SPARE PART LIST OKIPAGE 8c Plus

Änderungen vorbehalten
Changes without notice


SECTION 1 Printer Unit, part 1

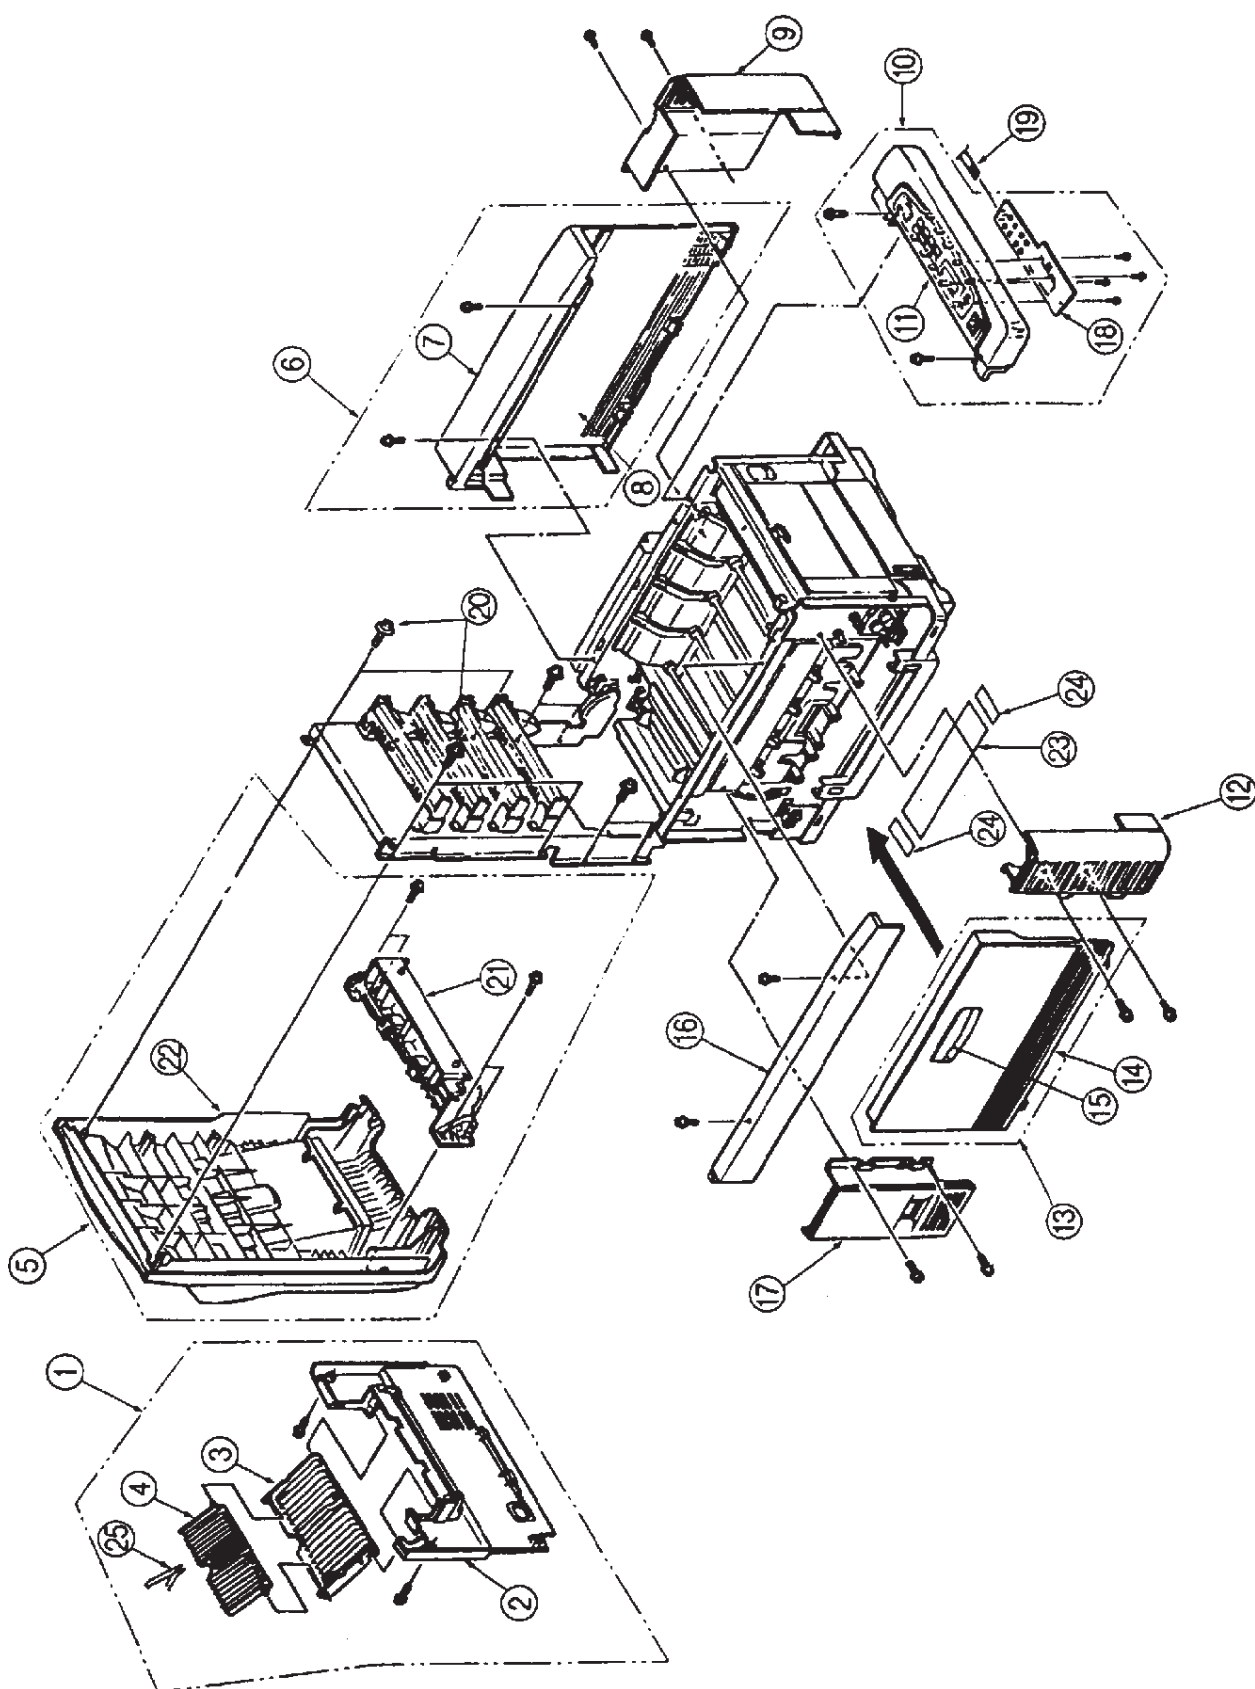

Liste 1 Printer Unit, part 1

NR .	BEZEICHNUNG	BESTELL - NR .	BEMERKUNG
1	REAR COVER ASSY	40315201	
2	REAR COVER	40098401	
3	FACE-UP STACKER	40187501	
4	SUPPORT STACKER	40187601	
5	STACKER COVER ASSY	40314801	
6	SIDE COVER ASSY (R)	40315001	
9	FRONT COVER (R)	40098301	
10	OP PANEL COVER ASSY	40314906	
11	OP PANEL COVER SUB ASSY	40492603	
12	FRONT COVER	40098201	
13	SIDE COVER ASSY(L)	40315101	
16	SIDE FRAME (L)	40195601	
17	REAR COVER (L)	40195701	
18	PCO BOARD	40387201	
19	CONN. CODE SUMI CORD ASSY	40919301	
20	SCREW	4PB4083-5670P1	
21	FD EJECT GUIDE ASSY	40303601	
22	STACKER COVER SUB ASSY	40449901	
23	FILM WASTE TONER	40728601	
24	FOAM SEAL (COVER)	40728701	
25	SUPPORT SPRING (FU)	40664701	


SECTION 2 Printer Unit, part 2

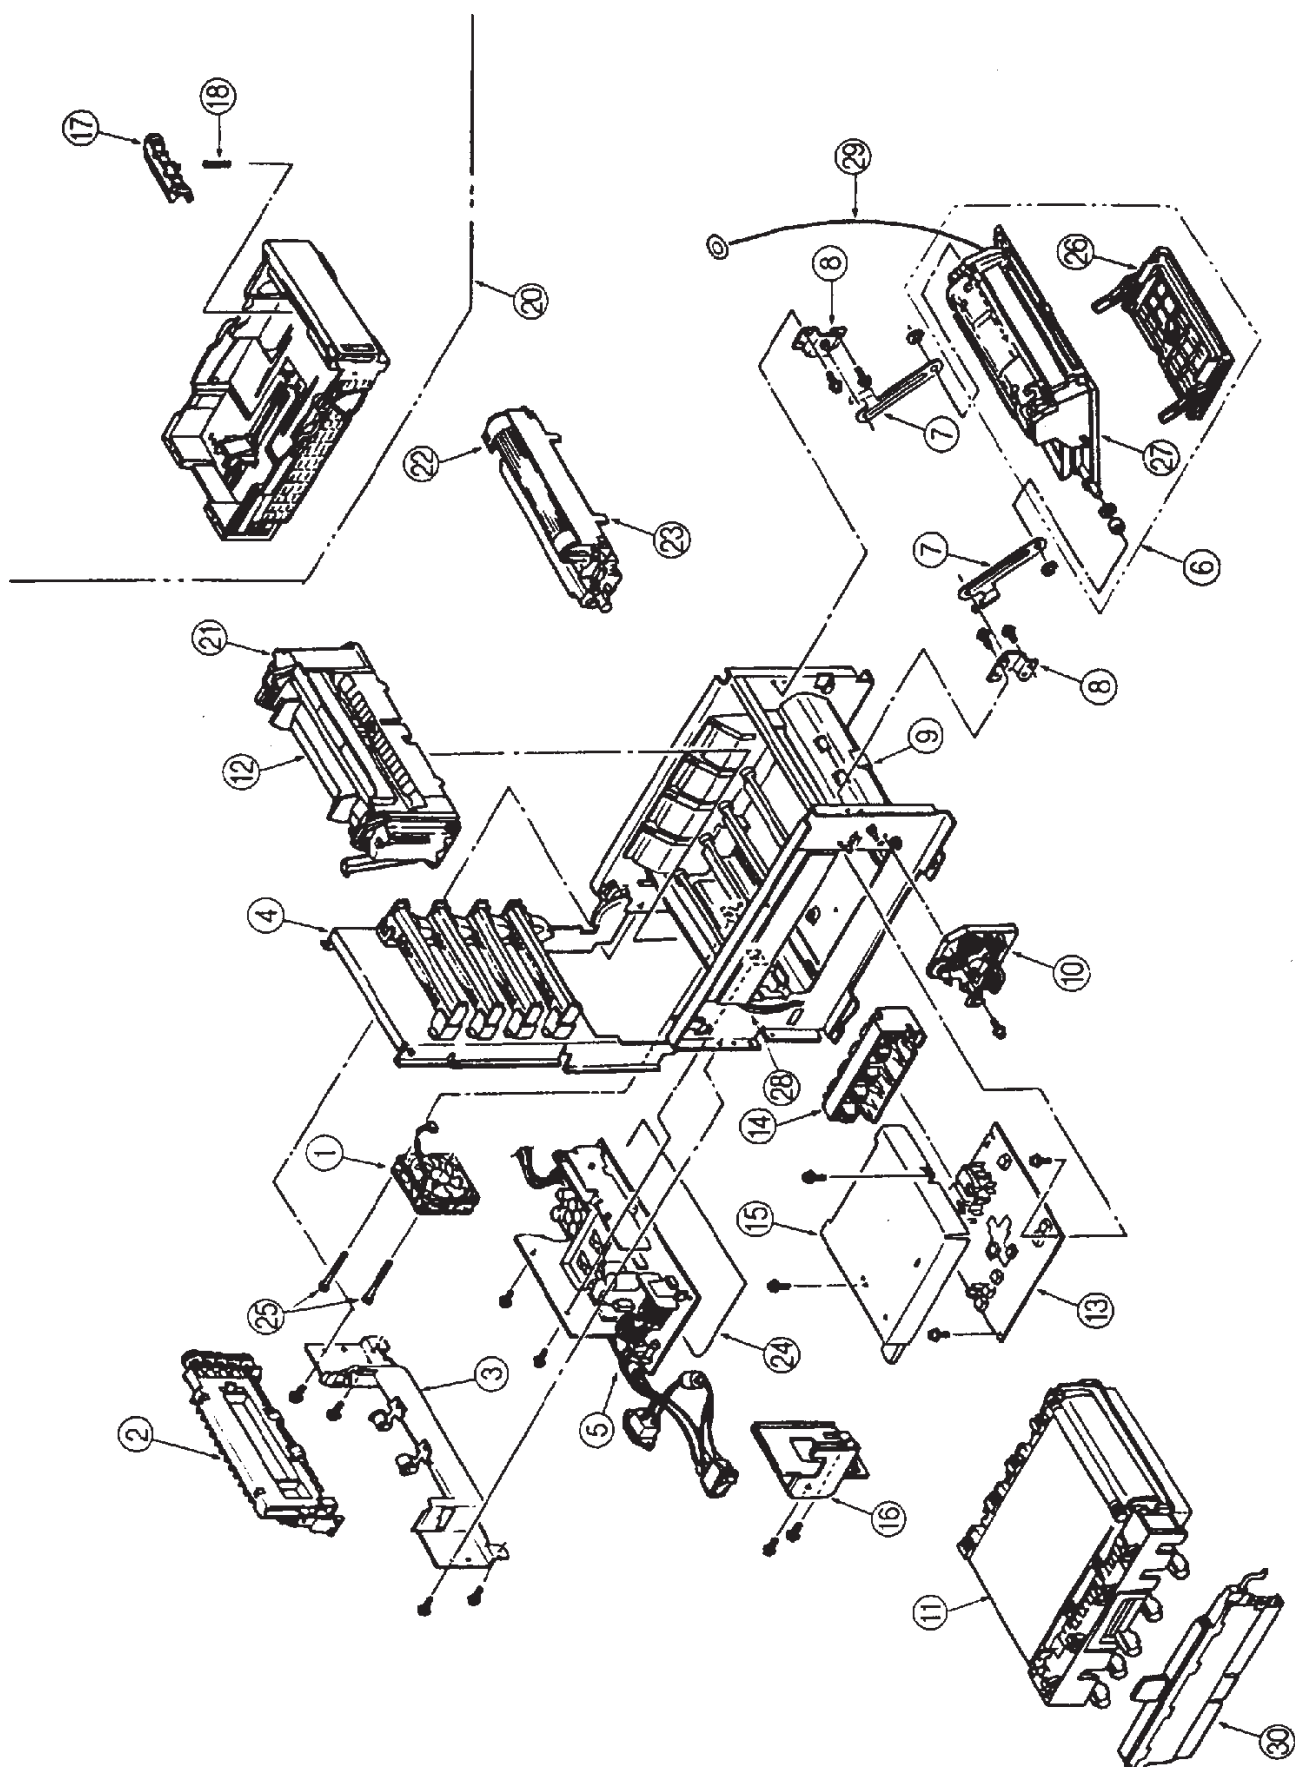

Liste 2 Printer Unit, part 2


NR.	BEZEICHNUNG	BESTELL - NR.	BEMERKUNG
1	FAN MOTOR	40255201	
2	PAPER GUIDE EJECT ASSY	40303401	
3	EJECT FRAME ASSY	40303501	
4	UPPER FRAME UNIT	40410701	
5	POWER UNIT; ACDC SWITCHING	40018901	120V
	POWER UNIT; ACDC SWITCHING	40019001	230V
6	FRD FRONT UNIT	40311201	
7	FF LINK PLATE	40193501	
8	FF LINK BRACKET	40193601	
9	PAPER GUIDE INPUT ASSY	40303301	
10	TONER HOLDER GEAR ASSY	40309801	
11	BELT UNIT	O P T I O N	
12	OIL ROLLER UNIT	O P T I O N	
13	HV POWER SUPPY	40065601	
14	BRACKET ASSY (HV)	40325001	
15	HV-PLATE	40168001	
16	INLET HOLDER	40193201	
17	SEP. FRAME ASSY	40607101	
18	SEP. SPRING	41179801	
20	PAPER CASSETTE ASSY	40744401	
21	FUSER UNIT	O P T I O N	
22	TONER CARTRIDGE	O P T I O N	
23	EP CARTRIDGE	O P T I O N	
24	INSULATION SHEET	40191201	
25	SCREW	PSW2W3-30C	
26	MANUAL HOPPER ASSY	40838801	
27	FDR MAIN UNIT ASSY	40449001	
28	CONN. CORD WIRE	40294201	
29	CONN. CORD WIRE	40641801	
30	TONER WASTE BOX	O P T I O N	

SECTION 3 Main Chassis Unit

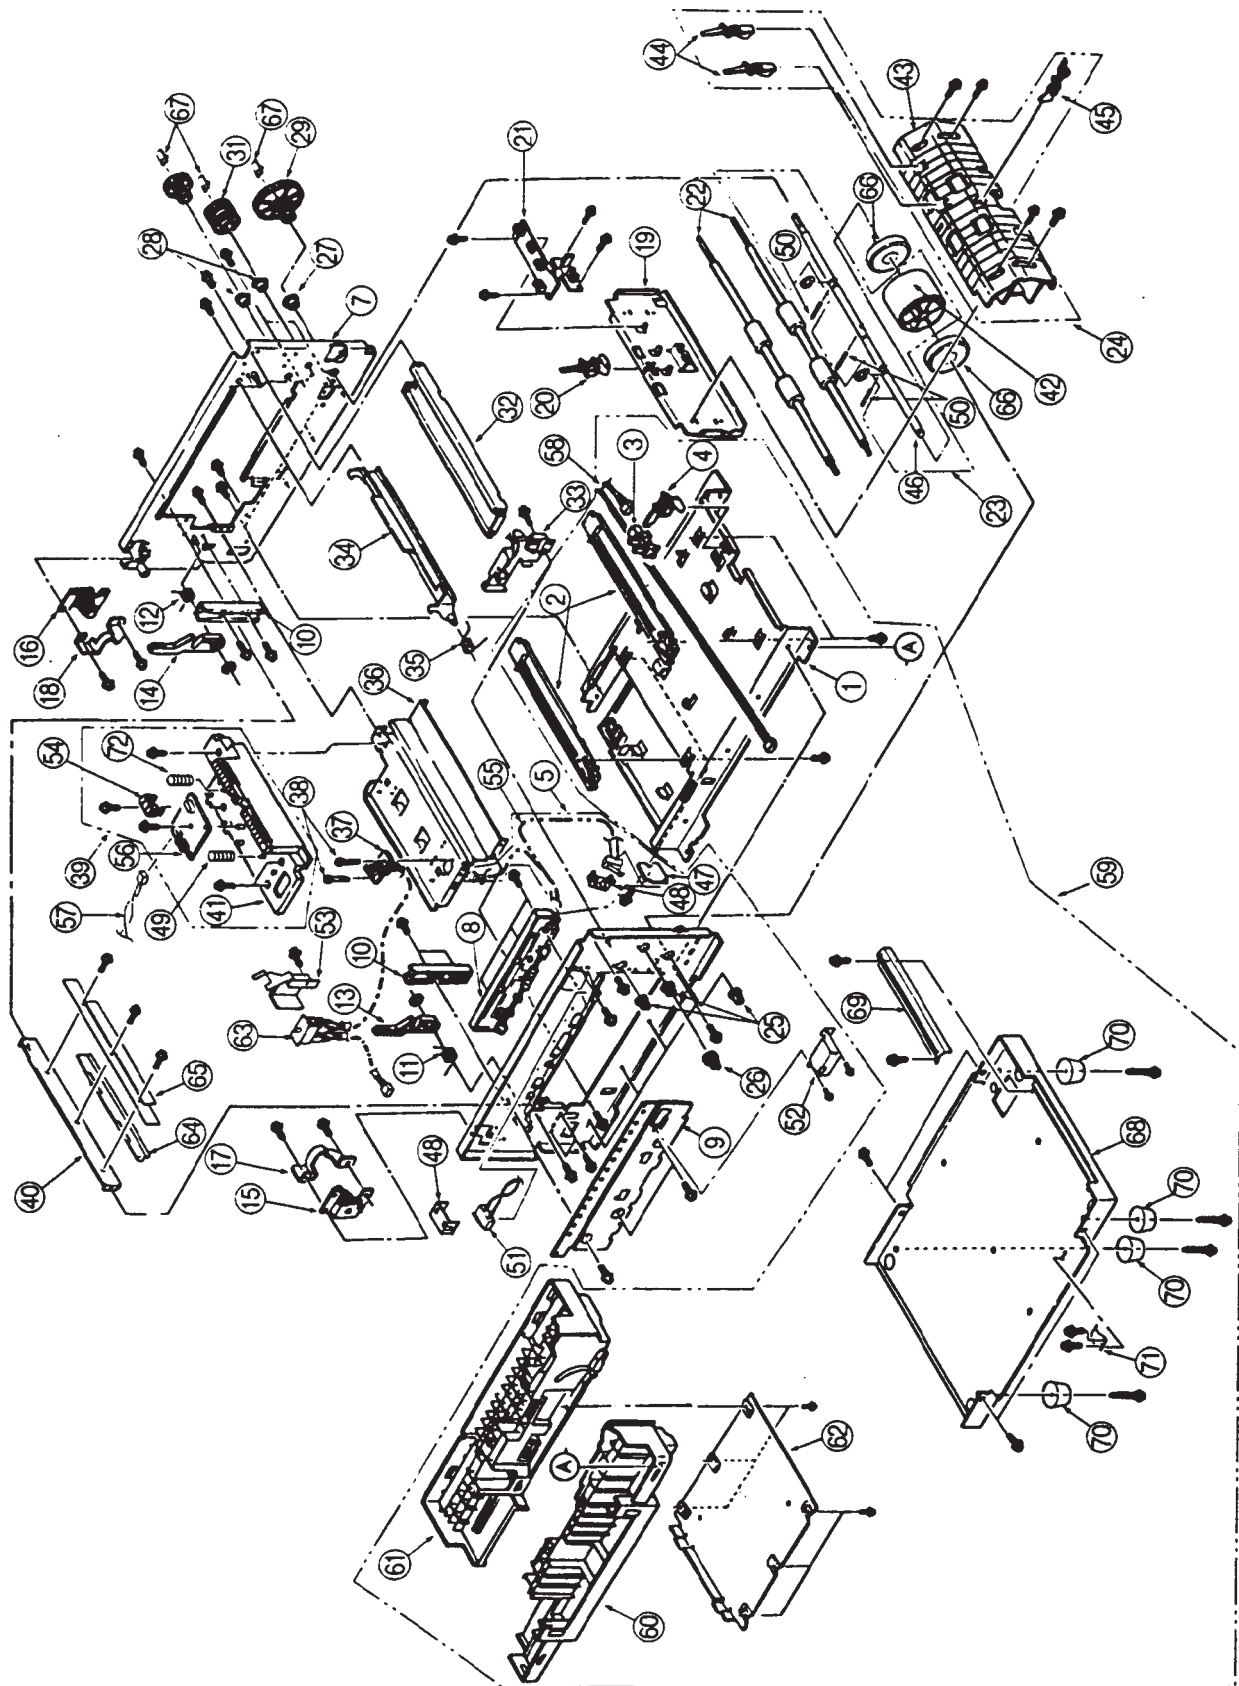

Liste 3 Main Chassis Unit, part 1


NR.	BEZEICHNUNG	BESTELL - NR.	BEMERKUNG
1	BASE PLATE	40175701	
2	GUIDE BELT (F)	40096401	
3	PHOTO INTERRUPTER	40135301	
4	PAPER END LEVER	4PP4076-5154P1	
5	TONER BOX SENSOR ASSY	40450401	
6	SIDE FRAME (L)	40171401	
7	SIDE FRAME (R)	40171301	
8	SB CONTACT ASSY	40308801	
9	BLIND PLATE	40290201	
10	SIDE GUIDE, HEAT UNIT	40163401	
11	LOCK SPRING	40163701	
12	HEAT LOCK SPRING	40835001	
13	LOCK LEVER (HEAT UNIT, L)	40163501	
14	LOCK LEVER (HEAT UNIT; R)	40163601	
15	2-WAY LIMITER (L)	40383701	
16	2-WAY LIMITER (R)	40383801	
17	GUARD PLATE (L)	40335001	
18	GUARD PLATE (R)	40335101	
19	LOWER STAY (FRONT)	40171201	
20	REGIST SENSOR LEVER	40144501	
21	PXM BOARD	40437601	
22	REGISTRATION ROLLER	40130801	
23	HOPPING ROLLER ASSY	40310601	
24	INPUT PAPER GUIDE ASSY	40303301	
25	HOPPING BEARING	40261301	
26	GEAR (Z20)	40130301	
27	BEARING (F)	4PP4076-5308P1	
28	BUSH	4PP4076-3949P1	
29	ONE WAY GEAR	40250901	
31	ONE WAY GEAR	40164301	
32	UPPER STAY (FRONT)	40171101	
33	SW-BRACKET	40388501	
34	LATCHLEVER PLATE (FD)	40195101	
35	LATCHLEVER SPRING (FD)	40195001	
36	HEAT STAY	40175201	
37	CONNECTION CORD WIRE	40563101	
38	SCREW	4PB4043-4718P1	
39	HEAT UNIT GUIDE ASSY	40162101	
40	EP STAY	40175101	
41	HEAT GUIDE ASSY	40449401	
42	HOPPING ROLLER BOSS ASSY	40449701	
43	INPUT PAPER GUIDE A	40097301	
44	INPUT SENSOR LEVER	40144301	

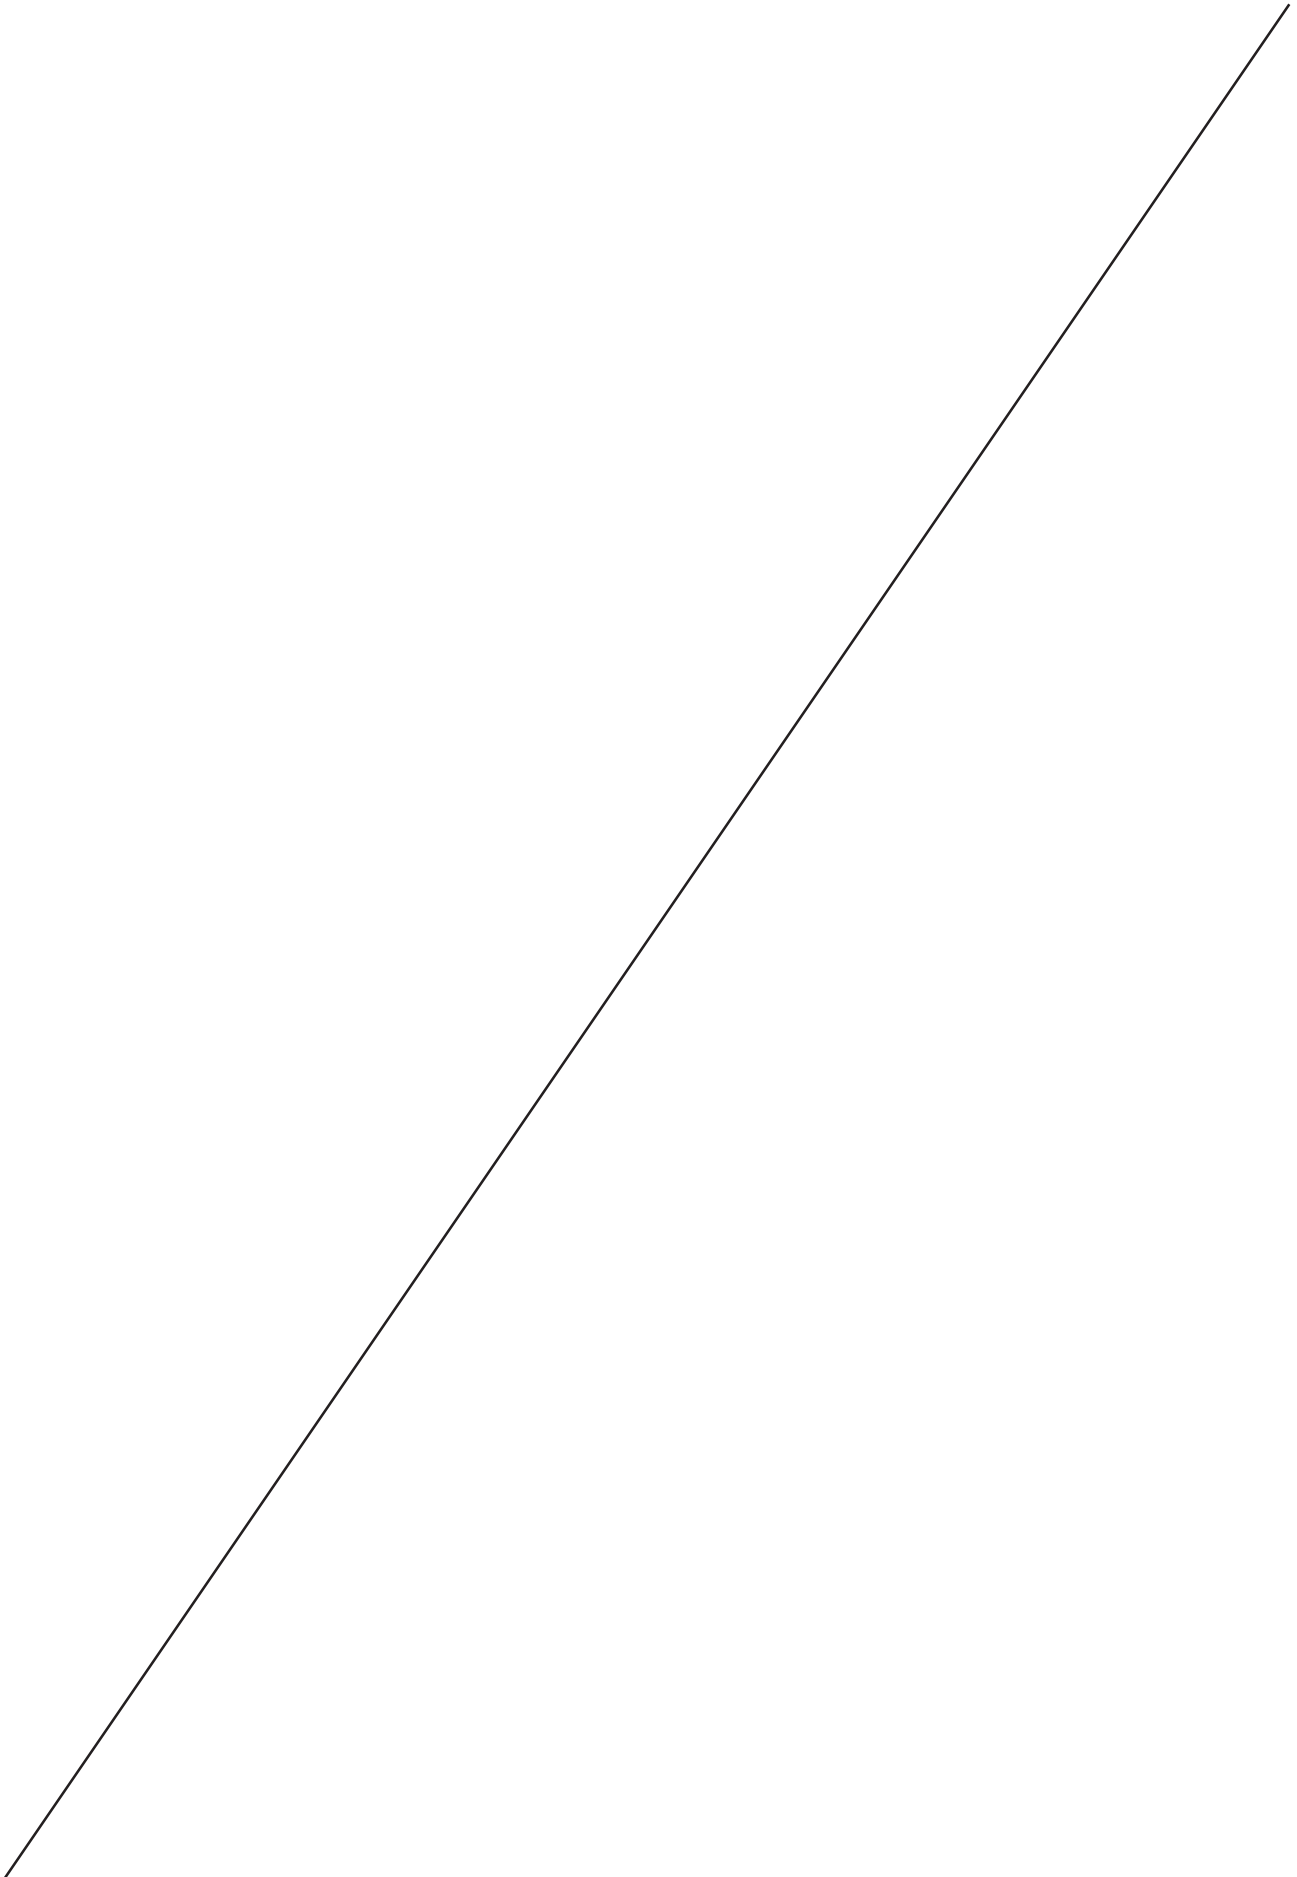

Liste 3 Main Chassis Unit, part 2

NR .	BEZEICHNUNG	BESTELL - NR .	BEMERKUNG
45	2 ND FEED SENSOR LEVER	40144401	
46	HOPPING ROLLER SHAFT	40189601	
47	SWITCH BRACKET	40450201	
48	SWICH HOLDER	40408601	
49	EJECT HEAT SPRING	40264401	
50	KNOCK PIN	NK3-18-SUS	
51	CONN: CORD WIRE	40447201	
52	SWITCH BRACKET (SIDE)	40388401	
53	INTERLOCK SW. CABLE ASSY	40446501	
54	SENSOR COVER	40162201	
55	AMP6P-AMP4P	40172401	
56	PXL BOARD	40437501	
57	CORDWIRE_ AMP7P_AMP7P	40171801	
58	CORDWIRE_JST6P_AMP3PX2	40447301	
59	BASE PLATE ASSY	40303201	
60	CASSETTE GUIDE ASSY; L	40303101	
61	CASSETTE GUIDE ASSY, R	40302901	
62	BOTTOM PLATE	40164801	
63	CONNECTION CORD WIRE	40448501	
64	SHIELD HEAT PLATE	40551301	
65	HEAT SINK	40714401	
66	HOPPING ROLLER ASSY	40743701	
67	REGIST GEAR SPACER	40686701	
68	BOTTOM COVER (WELD)	40661001	
69	GUIDE PLATE	40661501	
70	RUBBER FOOT	40671001	
71	BIG FINGER	4PB4017-5125P2	
72	EJECT HEAT SPRING	40834901	


SECTION 4 Contact / Eraser Unit

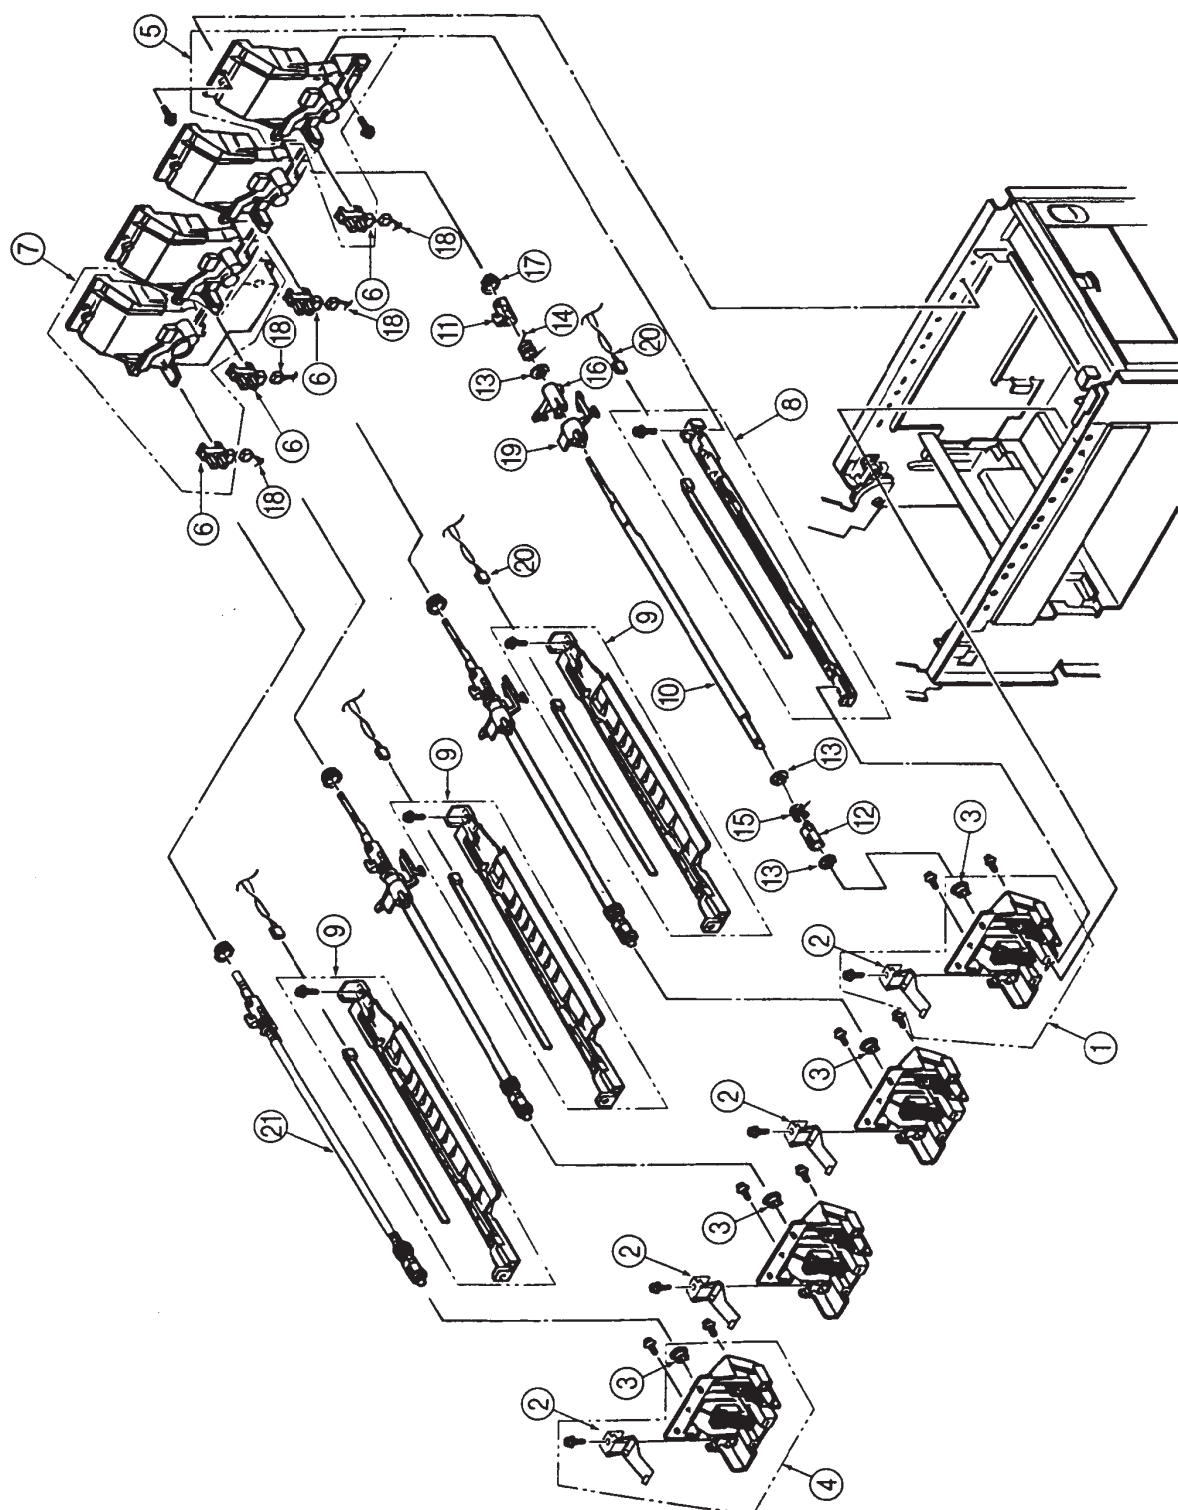

Liste 4 Contact / Eraser Unit

NR.	BEZEICHNUNG	BESTELL - NR.	BEMERKUNG
1	CONTACT ASSY	40324501	
2	EARTH PLATE	40278101	
3	BEARING	4PP4076-5308P1	
4	CONTACT ASSY	40324401	
5	CONTACT ASSY	40324601	
6	PHOTO INTERRUPTER	40135301	
7	CONTACT ASSY	40309001	
8	ERASER BKT ASSY	40308501	
9	ERASER BKT ASSY	40324301	
10	LINK SHAFT	40167901	
11	LINK LEVER (R)	40132301	
12	LINK LEVER (L)	40132401	
13	E-RING	RE6-SUS	
14	SUPPORT SPRING (R)	40168401	
15	SUPPORT SPRING (L)	40188501	
16	TONER SENSOR BRACKET	40136201	
17	BEARING	4PP3522-3568P1	
18	AMP14P-AMP3S4	40173301	
19	SENSOR ASSY T	40449502	
20	CORDWIRE AMP8P AMP2PX4	40172701	
21	SHAFT ASSY	40664301	


SECTION 5 PCB and Main Motor

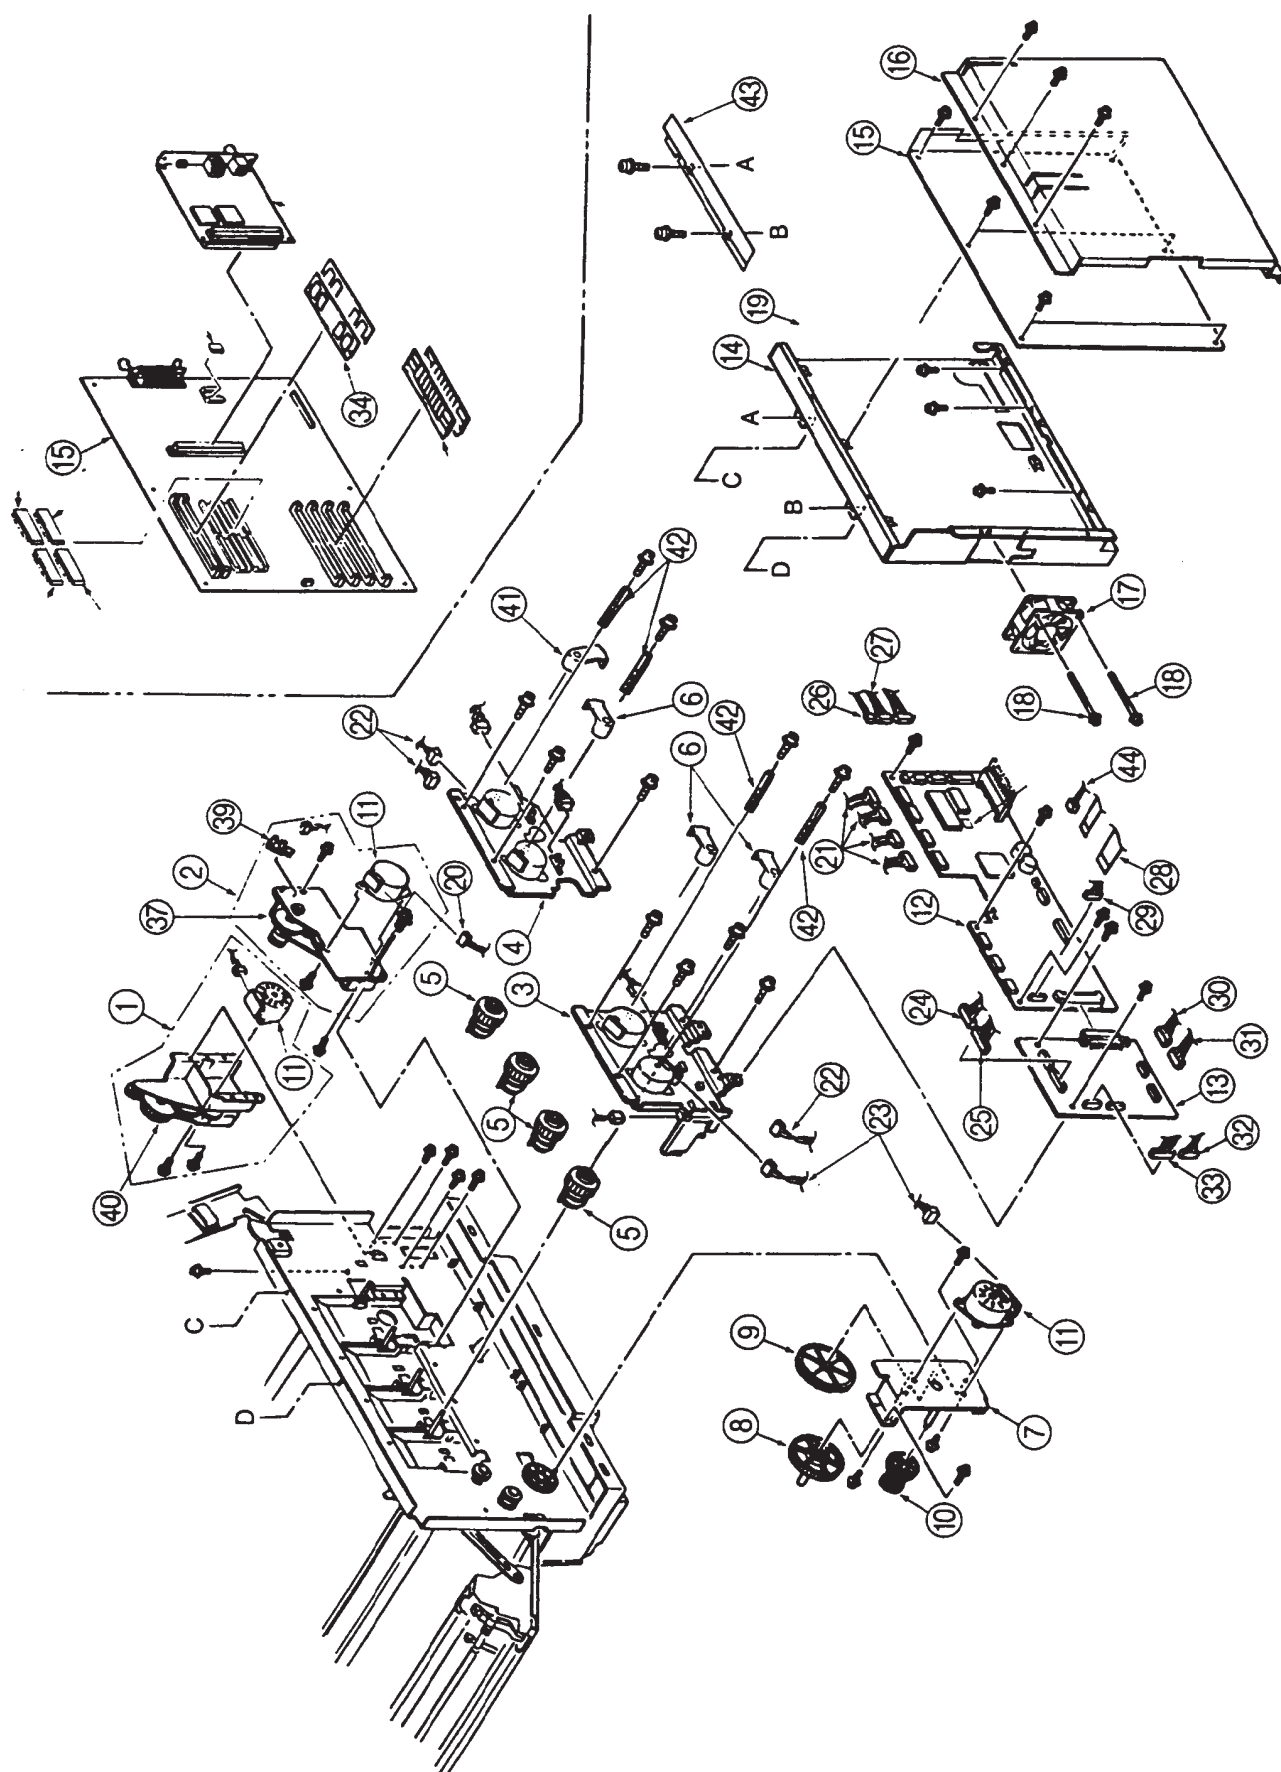

Liste 5 PCB and Main Motor

NR .	BEZEICHNUNG	BESTELL - NR .	BEMERKUNG
1	HEAT GEAR ASSY	40310001	
2	BELT MOTOR ASSY	40392301	
3	MAIN MOTOR ASSY	40309101	
4	MAIN MOTOR ASSY	40309201	
5	ONE-WAY GEAR	40208101	
6	UP/DN2 LEVER	40664401	
7	MOTOR HOPPING BRACKET	40175001	
8	IDLE GEAR	40143401	
9	FEED GEAR	40143501	
10	ONE-WAY GEAR	40164401	
11	PULSE MOTOR	40124101	
12	PX4 BOARD	40634106	
13	PXF BOARD	40437201	
14	CU COVER	40233901	
15	PCE BOARD	40950902	
16	SEALED PLATE	40376901	
17	FAN MOTOR	40197101	
18	SCREW	PSW2W3-25C	
19	BOARD IF	40377001	
20	AMP8P-AMP4PX2	40171002	
21	CONNECTOR JST 12	40456101	
22	CORD WIRE AMP-12P-AMP3PX2	40173001	
23	CORD WIRE AMP8P-AMP4PX2	40171001	
24	CORD WIRE AMP12P-AMP3PX4	40447101	
25	CORD WIRE AMP14P-AMP3PX4	40173301	
26	CORD WIRE AMP7P-AMP7P	40171801	
27	CORD WIRE AMP6P-AMP4P	40172401	
28	HCUJ CONN.	2381005P0003	
29	AMP 12P-AMP4	40172801	
30	JST6P-AMP3PX2	40447301	
31	AMP7P-AMP7P	40177701	
32	CORD WIRE JST8P-JST8P	40447001	
33	CORD WIRE AMP8P-AMP2PX4	40172701	
34	PS-SIMM	41073305	
37	BELT; MOTOR MECH ASSY	40450001	
39	PHOTO INTERRUPTER	40135301	
40	GEAR; HEAT MECH ASSY	40448901	
41	UP/DN2 LEVER	40664501	
42	EARTH PLATE	40583901	
43	SHIELD PLATE	40704901	
44	CONN. CORD WIRE	40447201	


SECTION 6 Cover Unit

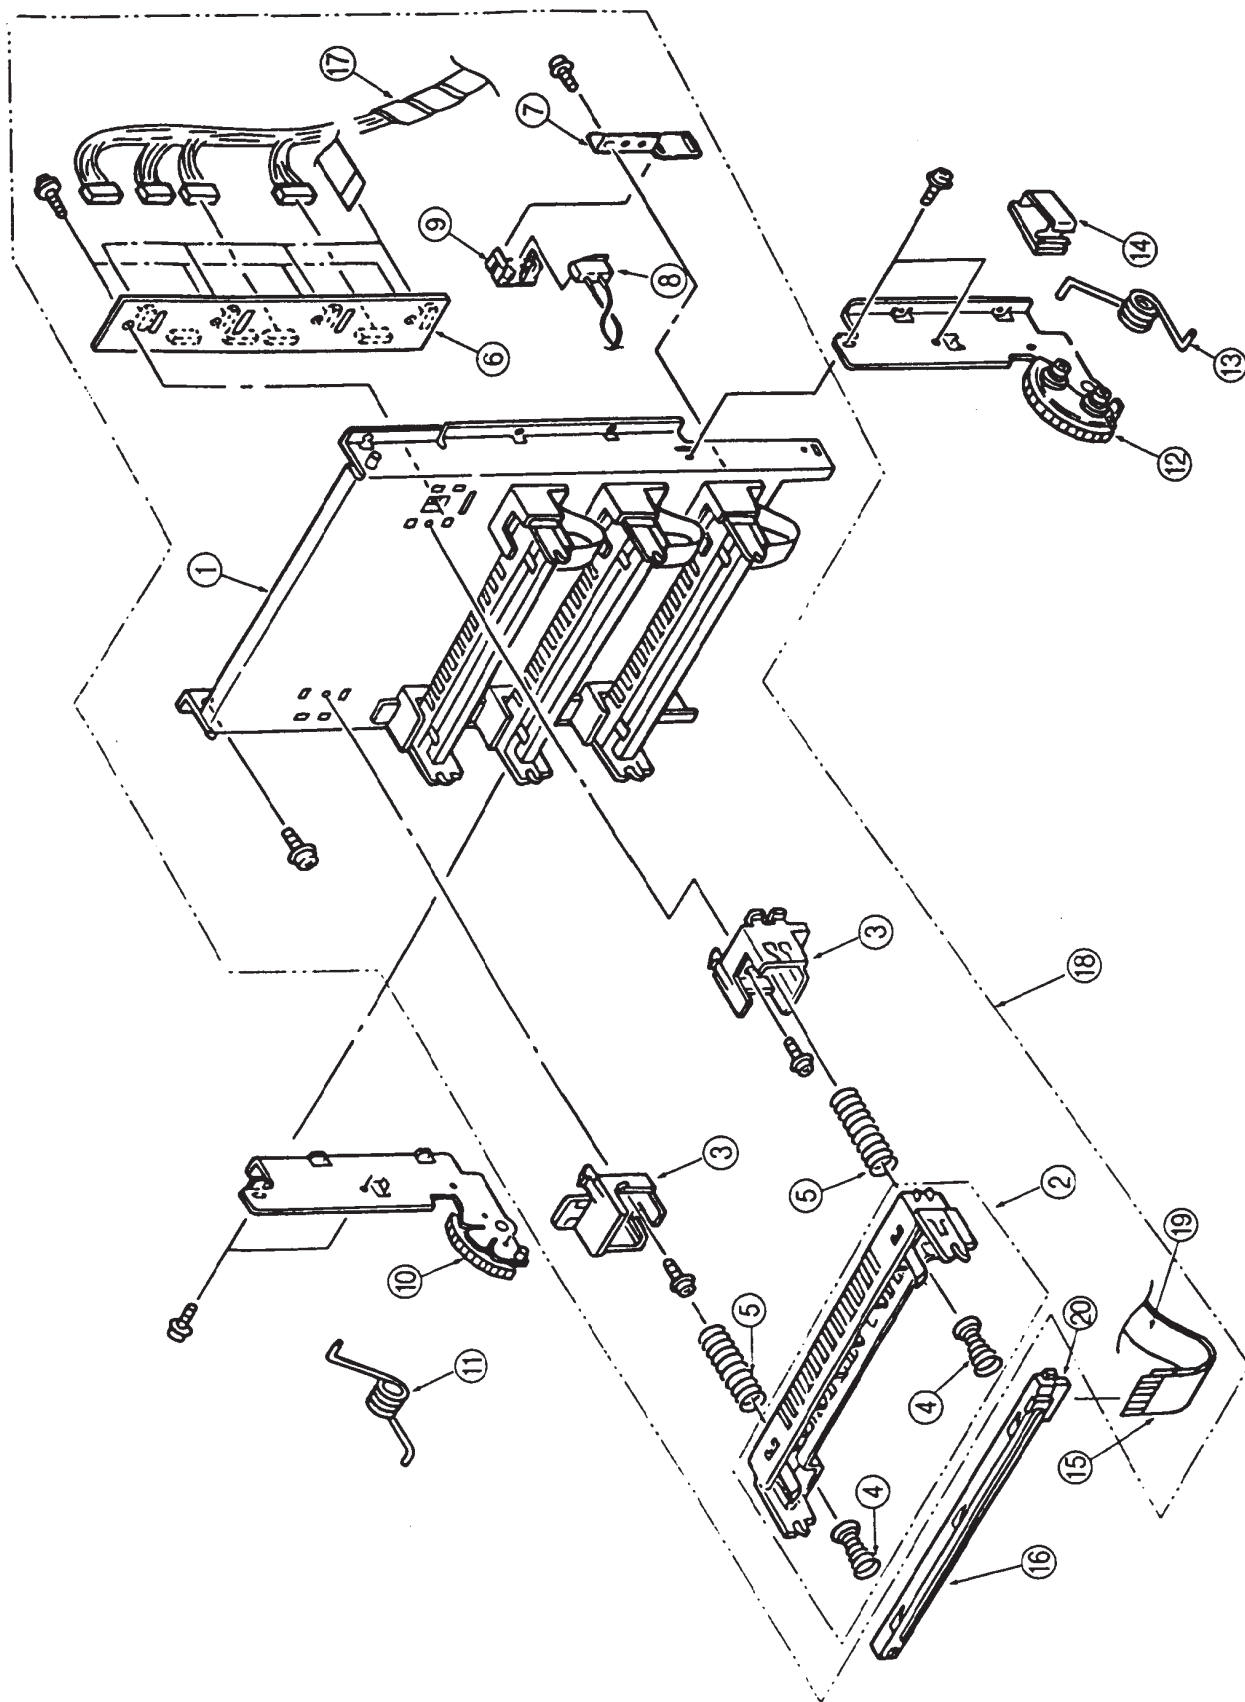

Liste 6 Cover Unit

NR.	BEZEICHNUNG	BESTELL - NR.	BEMERKUNG
1	UPPER FRAME	40187901	
2	LED HOLDER ASSY	40449101	
3	GUIDE HOLDER	40187801	
4	HEAD SPRING	40829701	
5	EP SPRING	40197705	
6	PD6 BOARD	40536001	
7	SENSOR OIL PLATE	40394201	
8	AMP2P-MSW	40171702	
9	SWITCH HOLDER	40408601	
10	SUPPORT PLATE ASSY; L	40449301	
11	TORSION SPRING (A)	40197401	
12	SUPPORT PLATE ASSY; R	40449201	
13	TORSION SPRING (B)	40218301	
14	FLAT CABLE CLIP	LP-6665-1	
15	CONN. HCUJ	2381005P0001	
16	LED HEAD UNIT	40547301	
17	CONN. JST12 AMP15	40456101	
18	UPPER FRAME ASSY	40410701	
19	CONNECTOR 12F-160	2381005P0006	
20	PC CONNECTOR (PXW26-1250B)	224A1287P0260	


SECTION 7 Main Motor, part 1 (yellow)

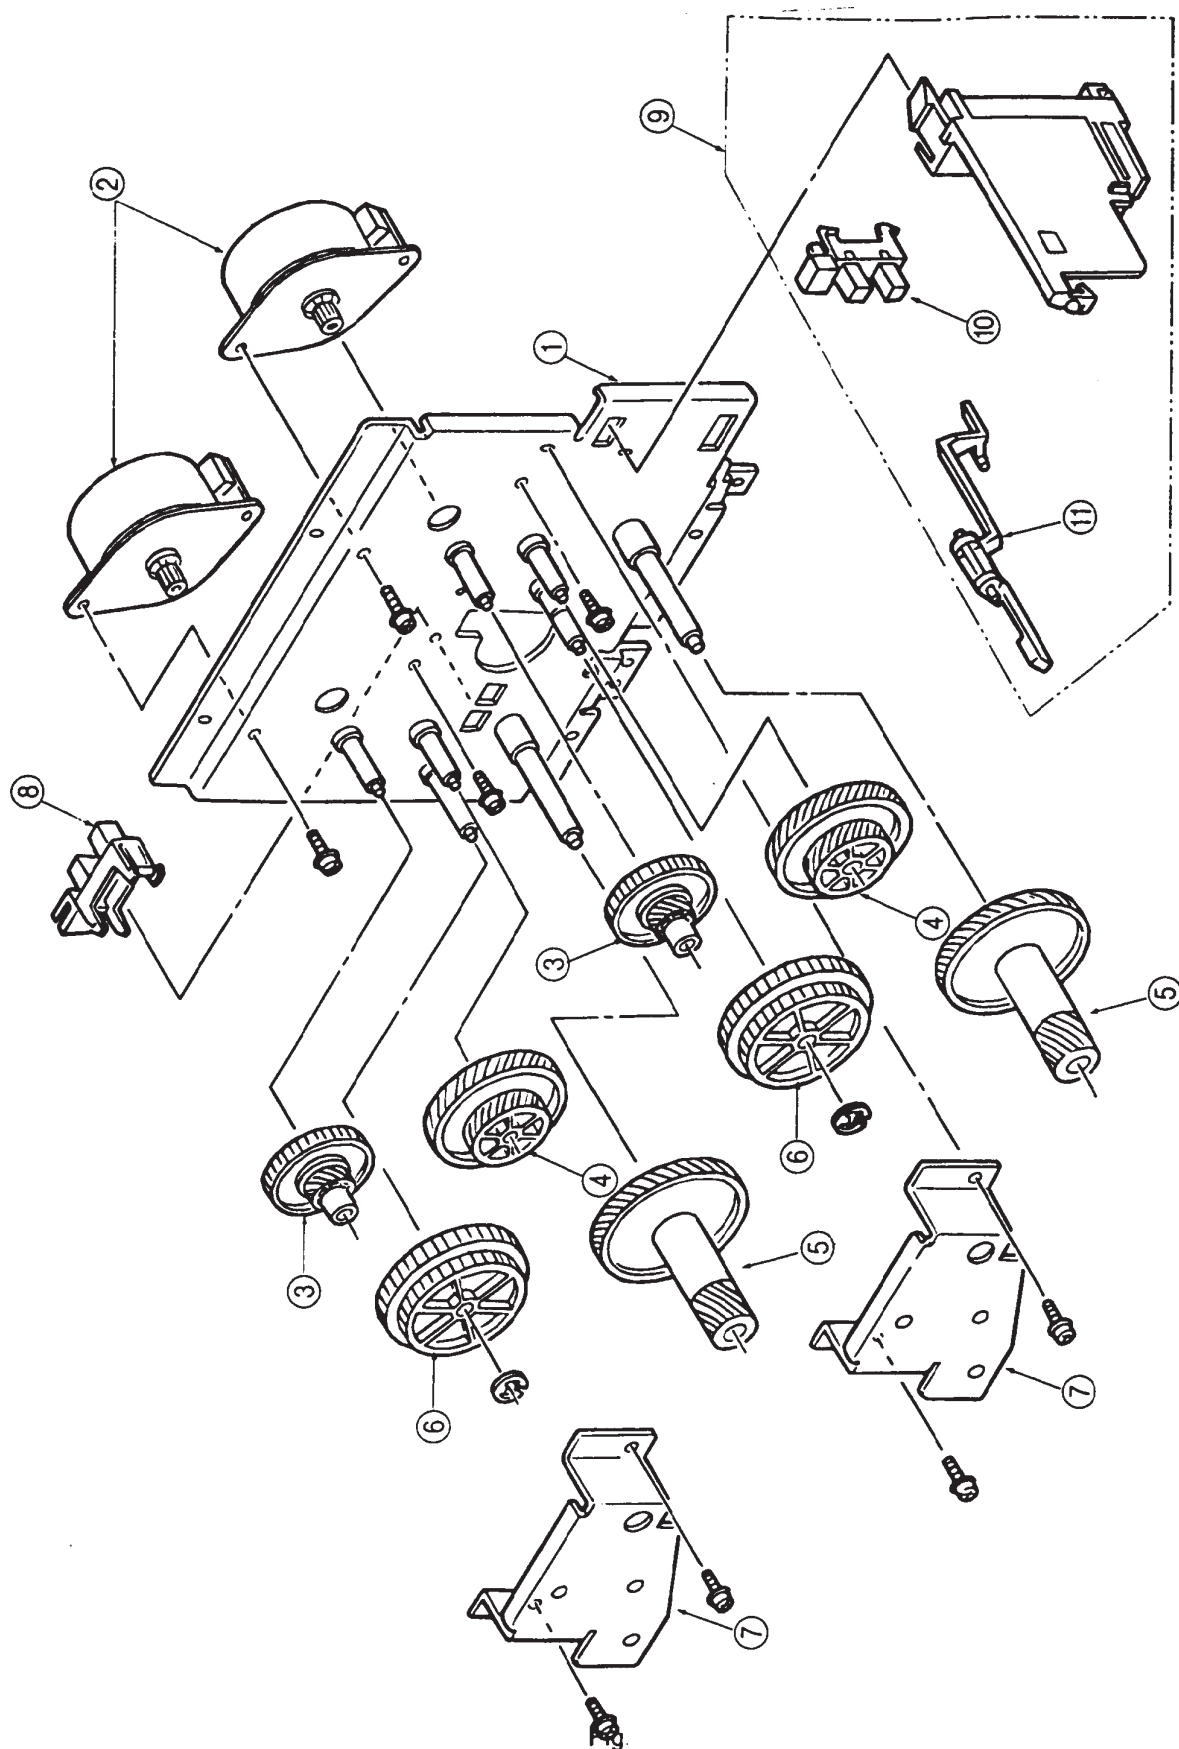

Liste 7 Main Motor, part 1 (yellow)

NR .	BEZEICHNUNG	BESTELL - NR .	BEMERKUNG
1	MOTOR FRAME	40165301	
2	PULSE MOTOR	40124101	
3	GEAR	40129901	
4	HELICAL GEAR	40130701	
5	HELICAL GEAR	40130601	
6	GEAR	40130201	
7	SUPPORT BRACKET	40129501	
8	PHOTO INTERRUPTER	40135301	
9	SENSOR TONER ASSY	40308601	
10	PHOTO INTERRUPTER	40135301	
11	SENSOR ASSY	40449601	


SECTION 8 Main Motor, part 2 (cayn, magenta, black)

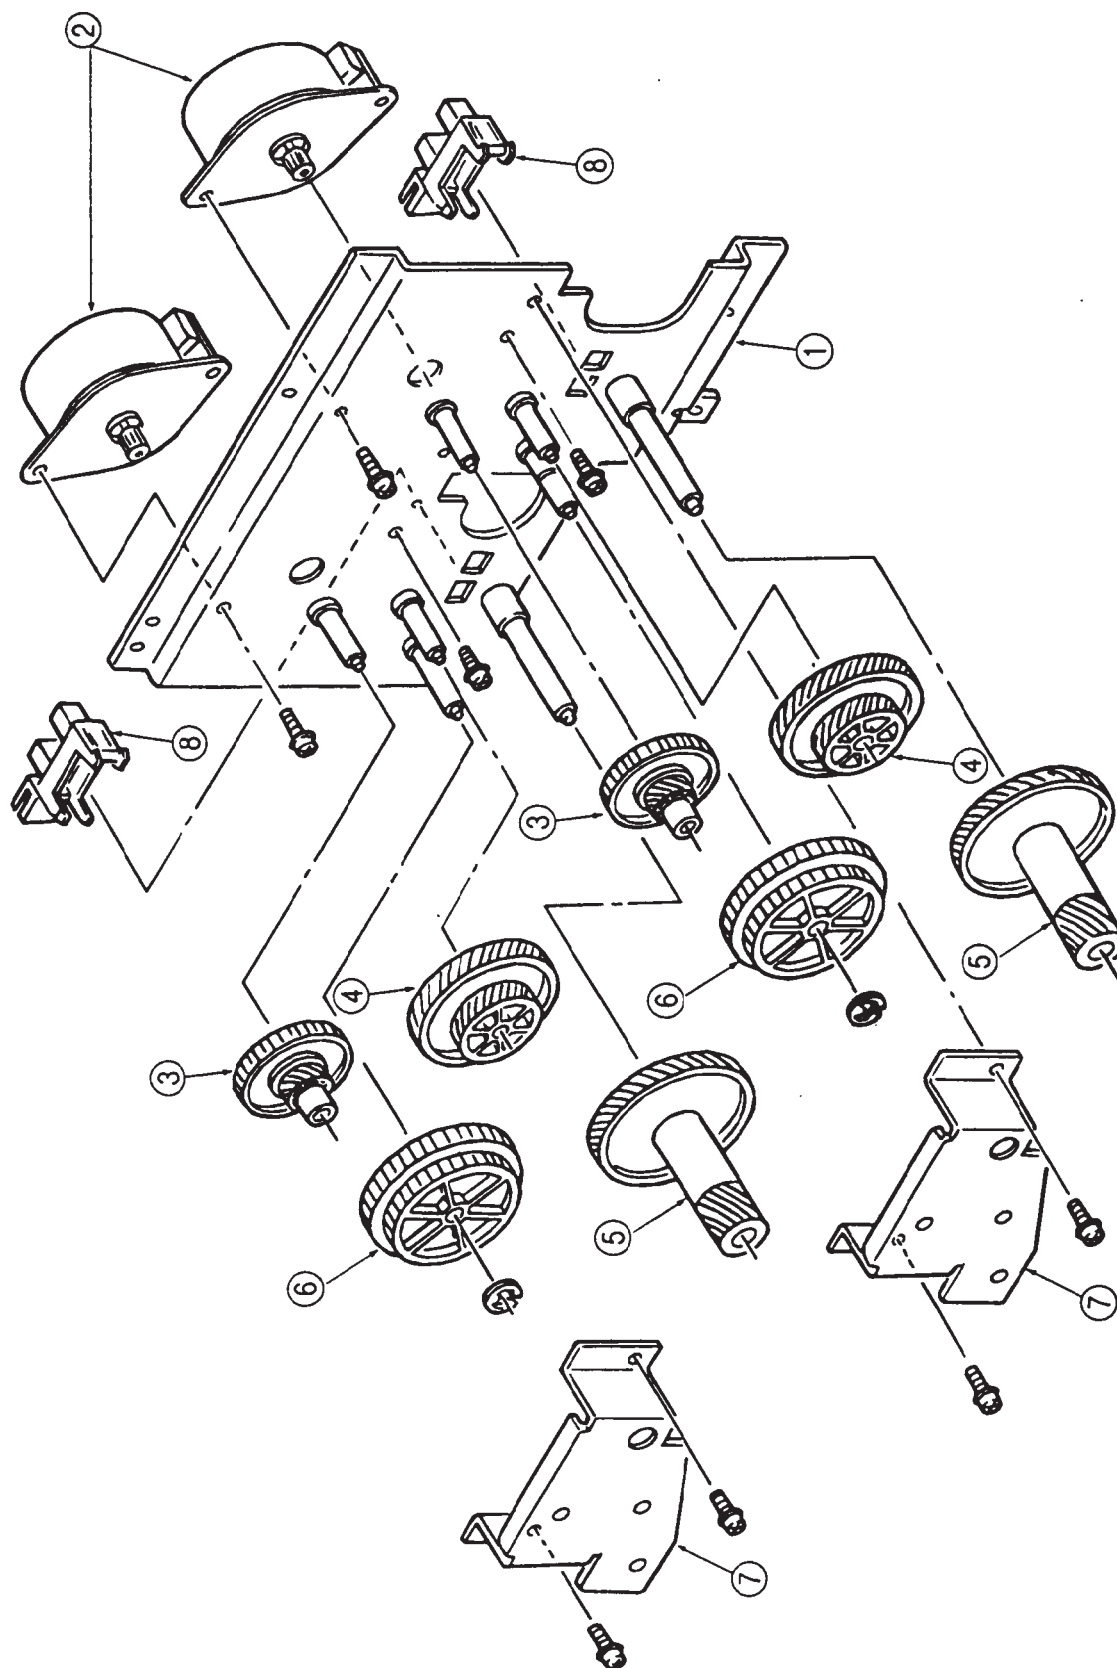

Liste 8 Main Motor, part 2 (cayn, magenta, black)

NR.	BEZEICHNUNG	BESTELL - NR.	BEMERKUNG
1	MOTOR FRAME	40129401	
2	PULSE MOTOR	40124101	
3	GEAR	40129901	
4	HELICAL GEAR	40130701	
5	HELICAL GEAR	40130601	
6	GEAR	40130201	
7	SUPPORT BRACKET	40129501	
8	PHOTO INTERRUPTER	40135301	


SECTION 9 Cassette Guide

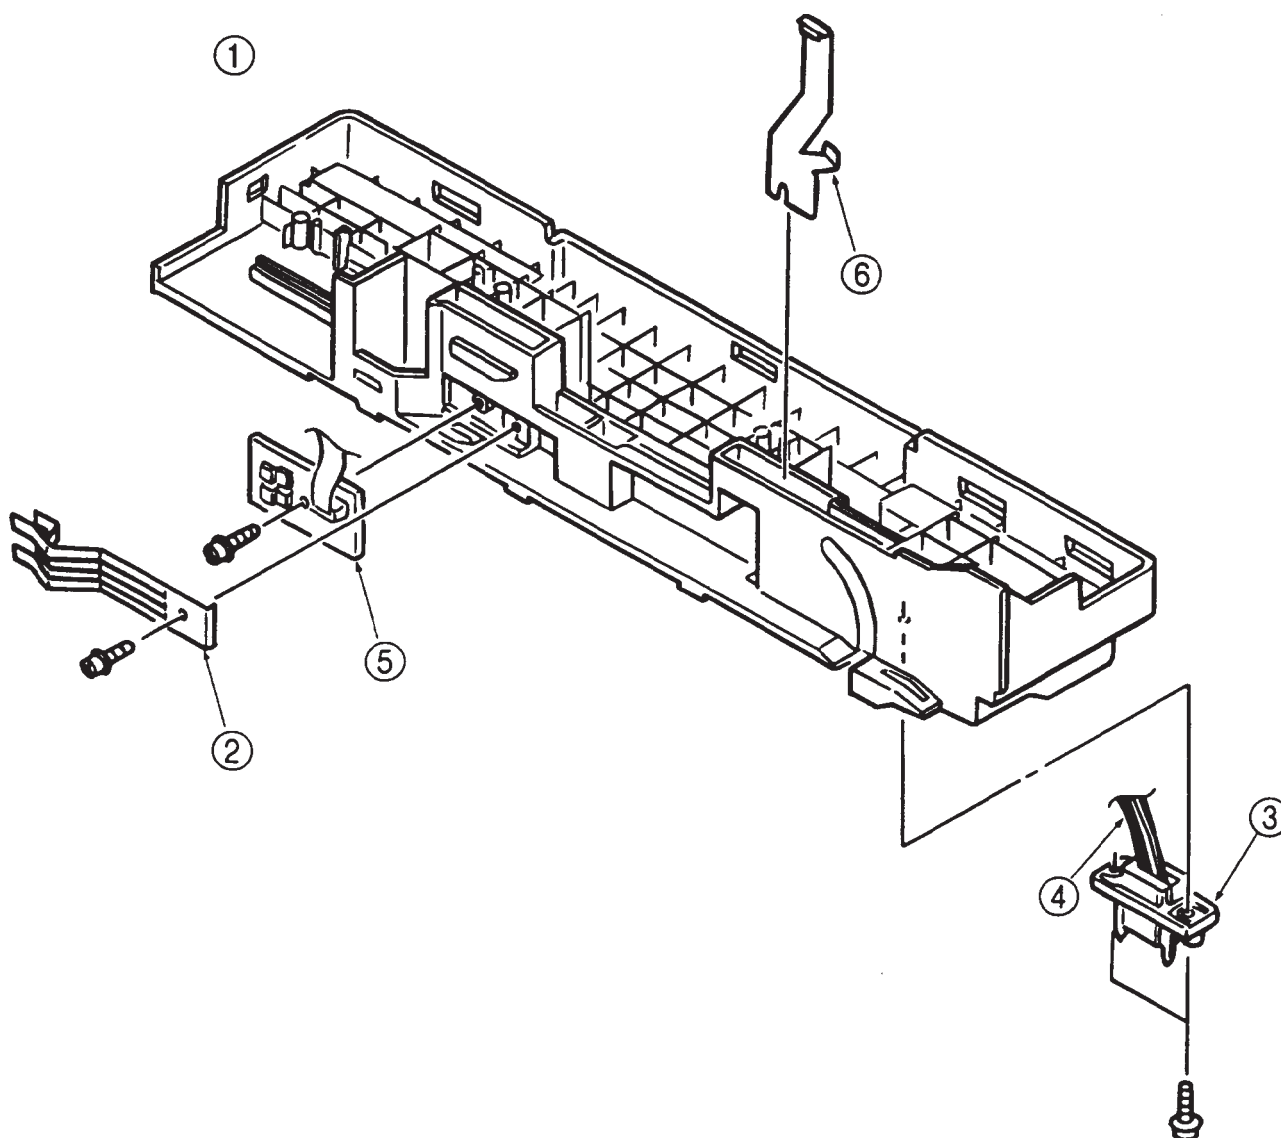

Liste 9 Cassette Guide

NR .	BEZEICHNUNG	BESTELL - NR .	BEMERKUNG
1	CASSETTE GUIDE SUB ASSY	40449801	
2	DETECTOR SPRING	4PP4076-5360P1	
3	SQUARE SHAPED CONNECTOR	220A1866P0140	
4	CONN. CORD	40177701	
5	PXC BOARD	40368301	
6	EARTH PLATE (LINK)	4PP4076-5742P1	

SECTION 10 2nd Paper Tray

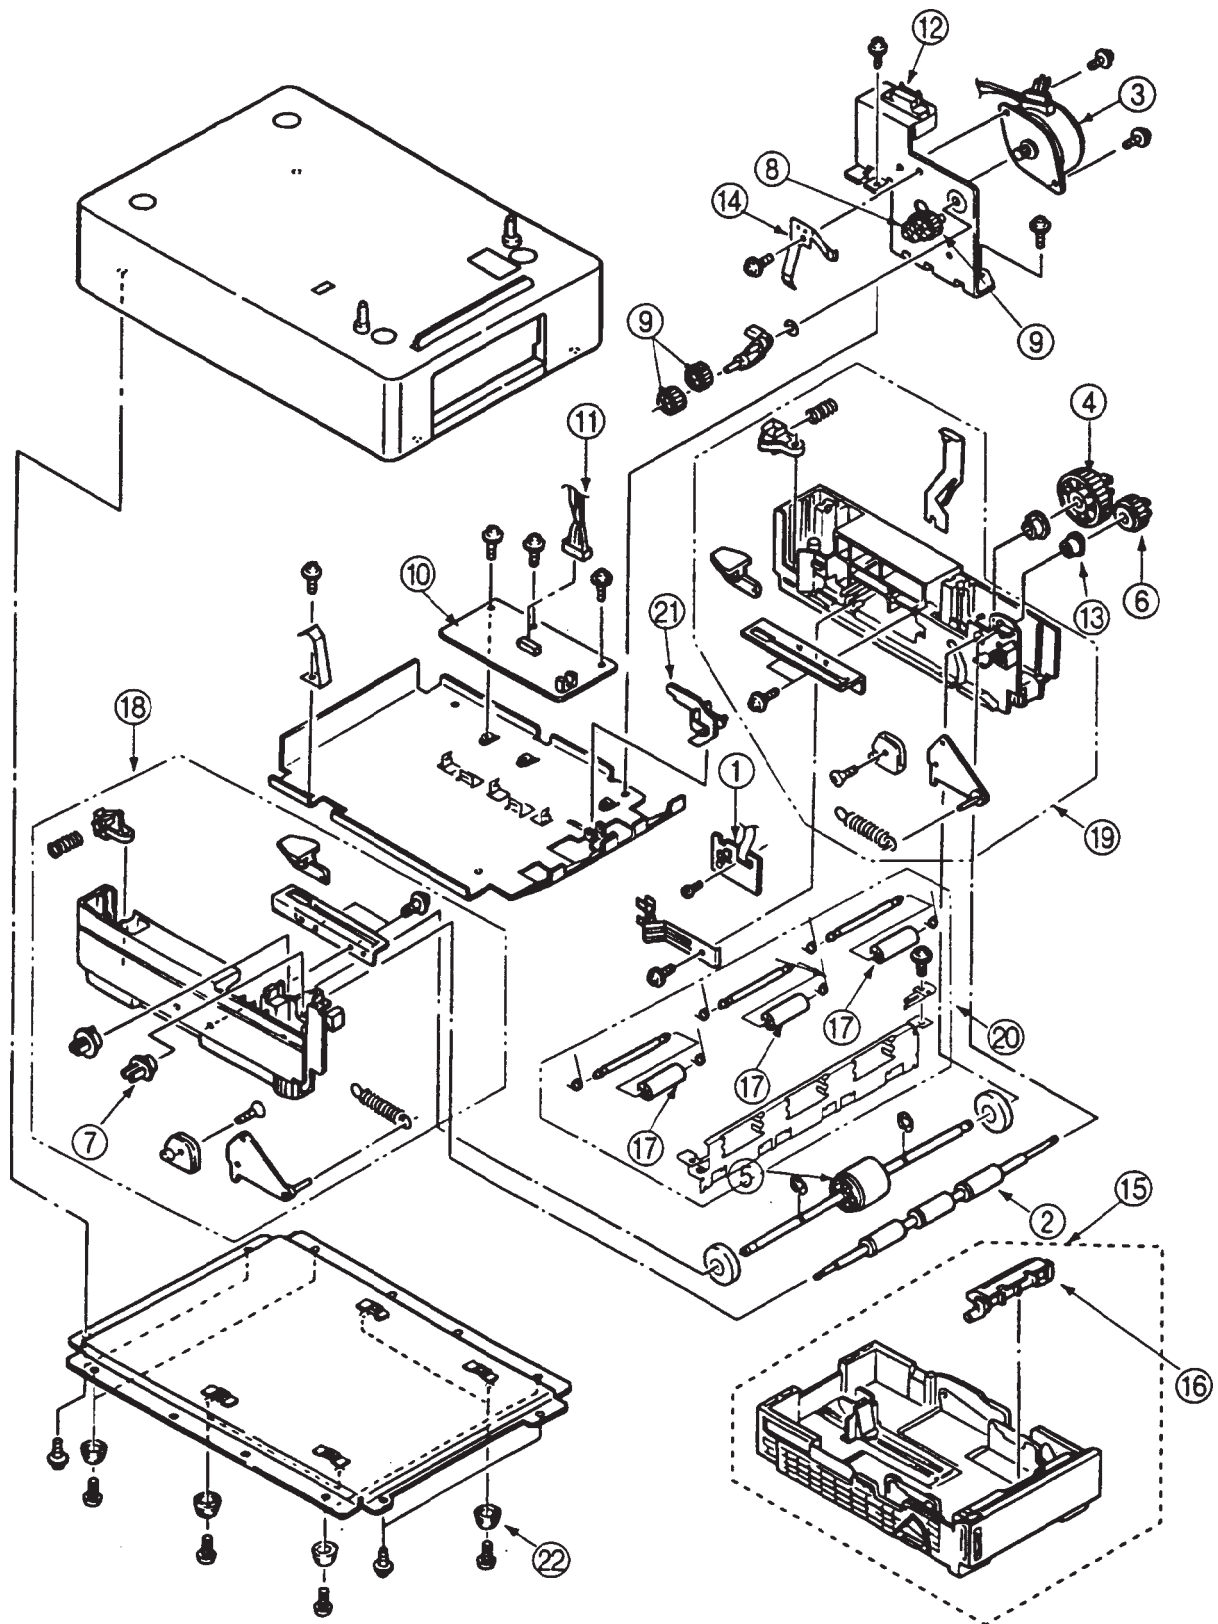

Liste 10 2nd Paper Tray

NR .	BEZEICHNUNG	BESTELL - NR .	BEMERKUNG
1	AOLD PCB	4YA4046-1646G11	
2	FEED ROLLER	41174001	
3	HOPPING MOTOR	4PB4076-5718P1	
4	HOPPING GEAR	4PB4043-4486P1	
5	HOPPING ROLLER ASSY	4PA4076-5755G1	
6	FEED ROLLER GEAR	4PB4043-4488P1	
7	FEED ROLLER BEARING	4PP4043-4489P1	
8	IDLE GEAR	4PP4076-5712P1	
9	PLANET GEAR	4PP4043-4491P1	
10	AOLT PCB	4YA4046-1645G11	
11	CONNECTOR CORD	4YS4011-4448P3	
12	SQUARE SHAPED CONNECTOR	220A1866P0141	
13	BUSH	4PP4076-3949P1	
14	SHAFT EARTH PLATE	4PP4076-5719P1	
15	PAPER CASSETTE ASSY	40744401	
16	SEPARATOR FRAME ASSY	40927901	
17	IDLE ROLLER	4PP4043-4477P1	
18	SIDE FRAME ASSY; L	40411901	
19	SIDE FRAME ASSY; R	40412001	
20	HOLDER ASSY	40727201	
21	PAPER END LEVER	4PP4076-5154P001	
22	RUBBER FOOT	40671001	